

J&J Service Instructions

January 5, 2005

Super Tube Valve Replacement



- Insert valve removal tool by lining the prongs on the tool with the corresponding slots in the valve.



- With tube deflated grasp the female fitting through tube with hand.
- Once you have a solid grip unscrew valve by turning counter clockwise.



- Remove male portion and install replacement.
- Tightening procedure is same as loosening only that the valve is turned clockwise.
- Valve needs to be hand tight.



- Fill tube using the super tube fill adaptor and air filler nozzle.
- Inflate tube to the recommended PSI of 3 lbs.

J&J Service Instructions

January 5, 2005

Super Tube Valve Replacement



- Before returning boat to service check the valve for leaks by applying a solution of soapy water.
- If bubbles form valve needs to be tightened.
- With tube inflated insert valve tighter and turn nut 1/8th turn.
- Re-check with soapy water solution. Repeat as needed till no bubbles form.

Required Parts and Tools

- 2-60-0038 Tool, Super Tube Valve Tightener
- 00367 Filler, Super-Tube Plastic Type
- 2-60-0053 Valve, Supertube Assy