

# J&J Service Instructions

May 27, 2004

## Whale Pump Conversion




Remove flo jet pump and all associated hardware as no parts are reused. Pump bracket may be removed, but this step is not needed.



Install the whale pump mount. Apply silicone to mount bolt to help seal drive shaft unit. (Disregard clamp. It has been updated. Read following step.)



Using the supplied hardware attach submersible pump.

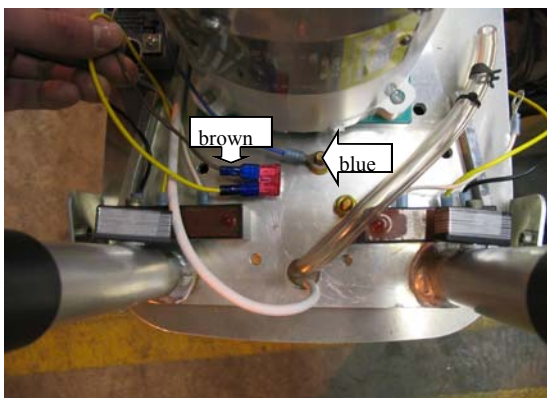

Wire and pick up tube assembly are to be routed through handle bar mount. Connect brown wire to fuse and blue wire to positive post. A zip tie can be used to secure hose to motor mount.

# J&J Service Instructions

May 27, 2004

## Whale Pump Conversion



Connect filter and valve lead Assy.. A zip tie may be used to attach line to motor mount. Careful as to not tighten to much as this may restrict flow.

### Parts

**2-60-A0013 Squirter Assy., Whale Pump Filter Hoses**